

MotionTech Product Manuals

1. MotionTech ProMax Drone

Introduction:

Welcome to the world of aerial photography and seamless flight with the ProMax Drone. Designed with the latest technology, the ProMax Drone promises an unparalleled flying experience.

Features:

- 4K Ultra HD Camera
- 30-minute flight time
- One-touch takeoff and landing
- GPS and GLONASS positioning

Setup:

1. Fully charge the drone and controller using the provided USB-C cable.
2. Install the MotionTech Flight app on your smartphone.
3. Connect your smartphone to the drone via Bluetooth.
4. Calibrate the drone's compass following the in-app instructions.

Troubleshooting:

- Drone not taking off: Ensure the battery is fully charged and propellers are securely attached.
- Blurry images: Clean the camera lens with a soft cloth.

2. MotionTech WearFit Smartwatch

Introduction:

Elevate your fitness journey with the WearFit Smartwatch. Track your workouts, heart rate, sleep, and more, all on your wrist.

Features:

- Heart rate and sleep monitor
- Multiple sport modes
- Waterproof design (IP68)
- Smartphone notifications

Setup:

1. Charge the smartwatch using the magnetic charging dock.
2. Download the MotionTech WearFit app on your smartphone.
3. Pair the smartwatch with your phone via Bluetooth.

4. Customize your settings and preferences in the app.

Troubleshooting:

- Not syncing with phone: Ensure Bluetooth is turned on and the watch is within range.
 - Inaccurate heart rate: Adjust the watch's placement on your wrist for a better fit.
-

3. MotionTech SoundPulse Wireless Earbuds

Introduction:

Experience crystal clear sound and a snug fit with the SoundPulse Wireless Earbuds. Whether you're working out or relaxing, SoundPulse is your perfect audio companion.

Features:

- Deep Bass technology
- 5-hour playback time
- Touch controls
- Noise-cancellation feature

Setup:

1. Charge the earbuds in their charging case.
2. Remove earbuds from the case to activate pairing mode.
3. In your device's Bluetooth settings, select 'SoundPulse Earbuds'.
4. Adjust earbud size with included ear tips for the perfect fit.

Troubleshooting:

- Low sound output: Ensure there's no debris in the earbuds and check the audio settings on your device.
- Earbuds not pairing: Reset the earbuds by placing them in the case and holding the touch controls for 5 seconds.